

Thank you for purchasing this Megaphone from Cruising Electronics

PLEASE NOTE

This unit is not waterproof

Do not clean with solvents

25 Watts is the Rated Power. Peak Voice Power is approx. 45 Watts

To replace the batteries

Use 8 good quality C size batteries, eg Eveready Gold, Energizer or Duracell.

Open the battery compartment by releasing the catch on the top of the Megaphone.

Take care to ensure the batteries are inserted correctly.

Please see overleaf for further instructions regarding correct battery placement.

Remove the batteries if the Megaphone will not be in use for a long period of time.

Operation

There is a delay of approx. 1.5 secs. before the amplifier operates, after either of the Press-to-Talk switches have been depressed. For continuous use, slide the Microphone switch to the ON position.

When carrying the device on the shoulder use the Press-to-Talk switch on the microphone

When carrying the device by the pistol grip, attach the microphone to the hanger bracket on the rear of the Megaphone, and use the pistol grip Press-to-Talk switch.

Speak close to the microphone, and at a good volume.

The Volume Control is located on the right hand side of the microphone.

It should be adjusted to the optimum level without causing feedback (howling).

The Siren is activated by the switch on the side, near the top of the pistol grip handle.

WARRANTY

For a period of 12 months from date of purchase Cruising Electronics will (at it's sole discretion) either repair, replace or refund, should any defect arise resulting from faulty manufacture.

The Warranty does not cover failure or damage caused by improper storage, misuse, exposure to liquids or other harmful substances, or any consequential damage or loss whatsoever.

The purchaser will be responsible for the cost and security of returning the faulty unit to Cruising Electronics or their Agent.

Cruising Electronics will pay for return carriage within NZ.

Proof of purchase will be required.



CRUISING ELECTRONICS

P.O. BOX 23

RUSSELL 0202

NEW ZEALAND.

Telephone 027 2552852

INTERNET www.cruisingelectronics.co.nz

EMAIL don@cruisingelectronics.co.nz

BATTERY PLACEMENT

Remove the plastic battery holders from the rear compartment of the Megaphone
Each plastic holder is marked on the side with the correct way to load the batteries
Taking very careful note of these markings, place four C size batteries into each holder

Now insert the holders, complete with batteries, into the Megaphone



+



THIS SHOWS THE TOP + END OF A BATTERY

The illustration below, looking down on the top of the Megaphone, shows the battery holders inserted into the Megaphone in the correct manner.

The + indicators as drawn below show you the TOP of the battery as shown above

