

Thank you for purchasing this Battery Pack from Cruising Electronics

*** This unit is not waterproof * Do not clean with solvents * Do Not Drop ***

The Shoulder Bag contains a sealed lead acid Battery.

The Battery is connected, via a fuse, to the socket contained in the side pocket of the bag.

The socket is used to connect the Battery to the Megaphone, or to the supplied Battery Charger.

Normal Use

The Cruising Electronics Megaphone in use can have the internal batteries fitted, or not.

Use of this battery pack will automatically disconnect the internal batteries if they are fitted.

This rechargeable Battery Pack is supplied charged and ready for immediate use.

A 6 meter Power Cord has been supplied with your Cruising Electronics SD9 or SD10 Megaphone.

Insert the small round plug on one end of the lead into the designated 12v socket on the Megaphone

Insert the large round plug on the other end of the lead into the socket in the side pocket of the bag.

It is easier to insert (or remove) the plug if the side pocket on the bag is held with the other hand.

Use the Megaphone as usual. If the slide switch on the megaphone microphone is used (rather than the 'trigger' switch), please remember to switch it off when you have finished speaking.

Leaving it on for long periods when not speaking will discharge the battery pack unnecessarily.

Charging the Battery Pack

Sealed lead acid batteries of the type used in this pack can be charged and discharged many times.

They DO NOT need to be completely discharged before re-charging.

They can be re-charged from any state of discharge without forming the 'memory' of other types.

Ideally, and for longest life, they should not be completely discharged (flat) before being re-charged

Under heavy use, this Power Pack can be used for at least 1 full day before re-charging.

With lighter use, a number of day's may be available before charging becomes necessary.

However, no harm can be caused by more frequent charging, as the supplied charger is completely automatic, and will only 'put back' the amount of battery power that has been used.

We recommended to put the battery pack on charge at the conclusion of each day's use.

This will ensure that the pack is always ready with a full charge at the start of the next day.

To charge, grip the pocket on the side of the bag, and with the other hand grip the plug on the Megaphone power lead. Remove the plug from the socket. Do not pull on the power cord

Insert the charger plug. Now plug the charger into a 240vac wall socket and turn it on.

The red indicator shows charging is taking place. The green indicator shows charging complete.

Other than for replacement, do not attempt to remove the Battery from the bag.

If the Megaphone or Charger does not operate, check the fuse contained in the fuse-holder inside the bag. Unscrew the holder to examine and/or test the fuse. Replace with a 3 amp 3AG Glass type.

Packing List

1 x shoulder bag, containing a 12v 9ah sealed lead acid battery, fuse-holder and electrical socket

The fuse-holder in the bag contains a 3 amp rating 3AG glass automotive type fuse. Do not use a higher rating fuse

1 x automatic battery charger, 240 vac input, 12vdc 1A output, with instructions.

1 x Power Pack instruction leaflet

WARRANTY

This Battery Pack is warranted for use only with Cruising Electronics Megaphones

For a period of 3 months from the date of purchase Cruising Electronics will either repair, replace or refund, should any defect arise resulting from faulty manufacture.

The Warranty does not cover failure or damage caused by failure to follow the supplier's instructions, careless or improper use,, misuse, exposure to liquids or other harmful substances, or any consequential damages or loss whatsoever.

The cost of returning a faulty unit is the responsibility of the purchaser.

CRUISING ELECTRONICS

67 WELLINGTON STREET

RUSSELL 0202

NEW ZEALAND

TELEPHONE 09 4037350

www.cruisingelectronics.co.nz

don@cruisingelectronics.co.nz

