

**Thank you for purchasing this Megaphone from Cruising Electronics**  
25 Watts is the Rated Power      Peak Voice Power is approx. 45 Watts

**PLEASE NOTE**

This unit is not waterproof \* Do not clean with solvents \* Low battery's reduce output

**Fitting The Batteries** Use 8 good quality C size batteries, eg Eveready Energizer or Duracell. Re-chargeable batteries produce a lower voltage, and the unit may not operate correctly with them. Open the battery compartment by releasing the catch on the top of the Megaphone. Take care to ensure the batteries are inserted correctly. See overleaf for further instructions. Remove the batteries if the Megaphone will not be in use for a long period of time.

**Voice Operation**      **Speak close to the microphone, and at a good volume.**

There is a delay of approx 1.5 secs. before the amplifier operates, after the *TRIGGER* switch has been depressed. For continuous use, slide the switch on the right side of the Microphone to *TALK*. The *VOLUME CONTROL* is located on the right hand side of the microphone. Adjust to suit. It should be adjusted to the optimum level without causing feedback (howling). When carrying the device on the shoulder, use the *TALK SWITCH* on the microphone. When carrying the device by the pistol grip, the Microphone can be held in the opposite hand, or the Microphone can be clipped to the hanger bracket on the rear of the Megaphone. Feedback (howling) is more likely at full volume with the Microphone in this position.

**Siren** Push the *SIREN* button on the microphone. To activate, press the *TRIGGER* switch or slide the *TALK* switch on the side of the Microphone to the Talk position

**Record** 10 seconds of Audio can be recorded, either from the Microphone or via Audio Input \* Slide the *TALK* switch on the Microphone to the Talk position. The PW indicator will light. When ready to begin recording, press the *RECORD* switch. The REC-ON indicator will light. Record your message (maximum 10 seconds length), then release the *RECORD* switch. Note, if the *RECORD* switch is on for longer than 10 seconds, the REC-ON light will go out. The recording will be retained until the *REC* button is again depressed.

**Playback** **IMPORTANT First press the *TRIGGER* or slide the *TALK* switch to Talk.** Now press the *PLAY* button. To stop playback ***release the PLAY button first.***

**DC Power** The unit can be operated from an external 12 volt source. **It is not suitable for 24 volts** This can be done whether or not internal batteries are installed. It will not charge the batteries. Push the small plug of the supplied Battery Cable into the DC12V socket on the side of the unit. Insert the larger plug into the cigar lighter socket in your motor vehicle. **Positive must be centre.**

**\*Audio Input** Audio from an MP3, Cassette player or similar can be played through the unit. Insert either end of the supplied Audio Cable into the Audio Line-in socket, situated underneath the body of the Megaphone, adjacent to the top rear of the pistol grip handle. Connect the other end of the cable to the Earphone socket of your audio device. Press the *TRIGGER* switch or use the microphone *TALK* switch to turn the megaphone on. Adjust your audio device volume control for the required level of sound. It is possible to 'talk over' your music, as the Microphone is active at all times. Adjust your audio device volume for the mix.

**WARRANTY**

*For a period of 12 months from date of purchase Cruising Electronics will either repair, replace or refund, should any defect arise resulting from faulty manufacture. The Warranty does not cover failure or damage caused by improper storage, misuse, exposure to liquids or other harmful substances, or any consequential damage or loss whatsoever. The purchaser is responsible for the cost and security of returning the faulty unit to Cruising Electronics. Cruising Electronics will pay for return carriage within NZ*

**CRUISING ELECTRONICS**

**67 WELLINGTON STREET  
RUSSELL 0202  
NEW ZEALAND**

TELEPHONE 09 4037350  
www.cruisingelectronics.co.nz  
don@cruisingelectronics.co.nz